



RAISED BEDS

ASSEMBLY GUIDE

Ecosure
Etills Ltd
Unit 1
Whiting Way
Melbourn
Hertfordshire
SG8 6NA

Phone: 01763 261781
Fax: 01763 268409
Email: sales@ecosure.co.uk
Website: www.ecosure.co.uk



THANK YOU

Thank you for buying an Ecosure Raised Bed. We hope you will be completely satisfied with your purchase. This industrial strength product is UK designed and manufactured – and made to last. If you have any technical enquiries, please call 01763 261781 option 3.

TOOLS REQUIRED



13mm spanner



13mm bolts,
nuts & washers
(supplied)

IMPORTANT SAFETY INFORMATION


- While every effort has been made to ensure the safety of our products, sharp edges may still remain.
- When using any power tools, be aware of others around you and wear suitable PPE (e.g. eye protectors and gloves).

PREPARATION

- Prepare the ground before setting up the raised bed. Ecosure Raised Beds should be sited on a flat, level base. Rake the area over and check that it is level using spirit level.
- If required, lay weed suppressant membrane.

ASSEMBLY GUIDE

a. Position two sides on their longest, narrowest side. Position one of the angle brackets so the fixing holes line up.

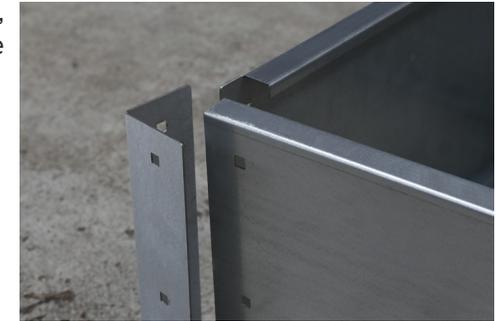

b. Push the domed bolts through then fix in place using the washers and nuts provided.



c. Repeat this process for the remaining bolts. Ensure that all fixings are secure.

Tighten using a 13mm spanner.

Weed suppressant membrane can be laid inside the bed at this stage if required, lapping up the sides of the bed.

Fill with soil – and you're ready to start growing



TIP

Check that the bed is square. Use a tape measure to ensure that the measurement from corner to corner on both sides is the same.