


## BRASS TAP INSTALLATION GUIDE

**a)** Wrap PTFE tap around the thread of the brass tap.



**b)** Screw the tap kit into the threaded outlet of your tank.

**BEING CAREFUL NOT TO OVERTIGHTEN.**

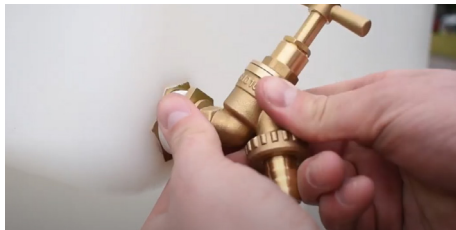

### Installation Notes:

**a.** If your tap does not sit straight, you may have too much PTFE tap on the thread. Remove some and try screwing the tap on again.

**b.** If water leaks out between the tap and outlet. You should apply more PTFE tap.



Scan for Tap Kit  
video guide

Ecosure  
Efills Ltd  
Unit 1,  
Whiting Way  
Melbourn,  
Hertfordshire, SG8 6NA  
**Phone:** 01763 261781  
**Email:** sales@ecosure.co.uk  
**Website:** www.ecosure.co.uk



## Vehicle Mounting Kit **Install Guide**



## THANK YOU

Thank you for choosing the Ecosure Vehicle Mounting Kit and for supporting British manufacturing. We hope you will be completely satisfied with your purchase. If you have any questions or require further information, please call 01763 261781 option 3.

### KIT INCLUDES

This vehicle mounting kit includes the following:

2 x A 'length'

4 x B 'width'

2 x C 'height'

3 x flat 90° - 3 holes

1 x flat straight 2 holes

4 x saddle 'T' bracket

4 x vertical 90° - 4 holes

4 x plastic end caps

39 x M10x35mm bolts

39 x channel nuts

### TOOLS REQUIRED



Drill

Always follow health and safety guidance.




17mm

spanner/socket



Soft mallet

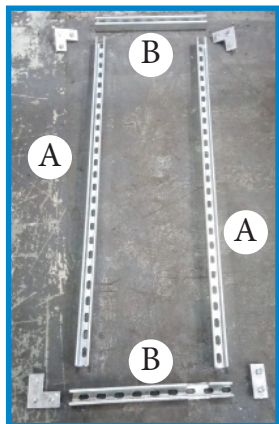


### 1. BUILD BASE FRAMEWORK

Ensure notched end lines up with outlet on tank. Bolt base frame together using the flat 90° and flat straight brackets as shown. Fit plastic end caps to the 'B' section. (2 x "A" pieces & 2 x "B" pieces).



### 2. BUILD 2 X ARCHES

Each arch is made up of 2 x "C" pieces, 1 x "B" piece. Bolt arches together using 2 vertical 90° brackets for each arch.

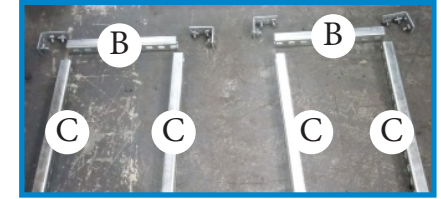


### 3. LOCATE BASE FRAME IN DESIRED LOCATION

Ideally alongside the vehical bulkhead, mark out 4 fixing positions through base of vehicle. Check for any potential obstructions below vehicle (ie cables/pipes) before drilling. Fix the base frame securely (*fittings not supplied for this*).

### 4. LOCATE THE TANK IN THE BASE FRAME

Once the base is fixed in, place your tank into the base frame.

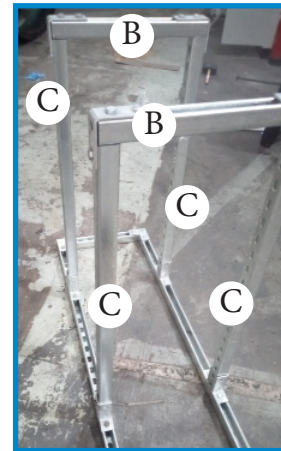

### 5. FIT BOTH ARCHES OVER THE TANK

Bolt the arches to the base frame using the saddle 'T' brackets, spacing them equally apart.



### 6. CHECK AND TIGHTEN

Check and tighten all bolts. If you have purchased the trim accessory with your kit, this can now be installed, using a rubber mallet.

